
5. Abmessungen / Dimensions

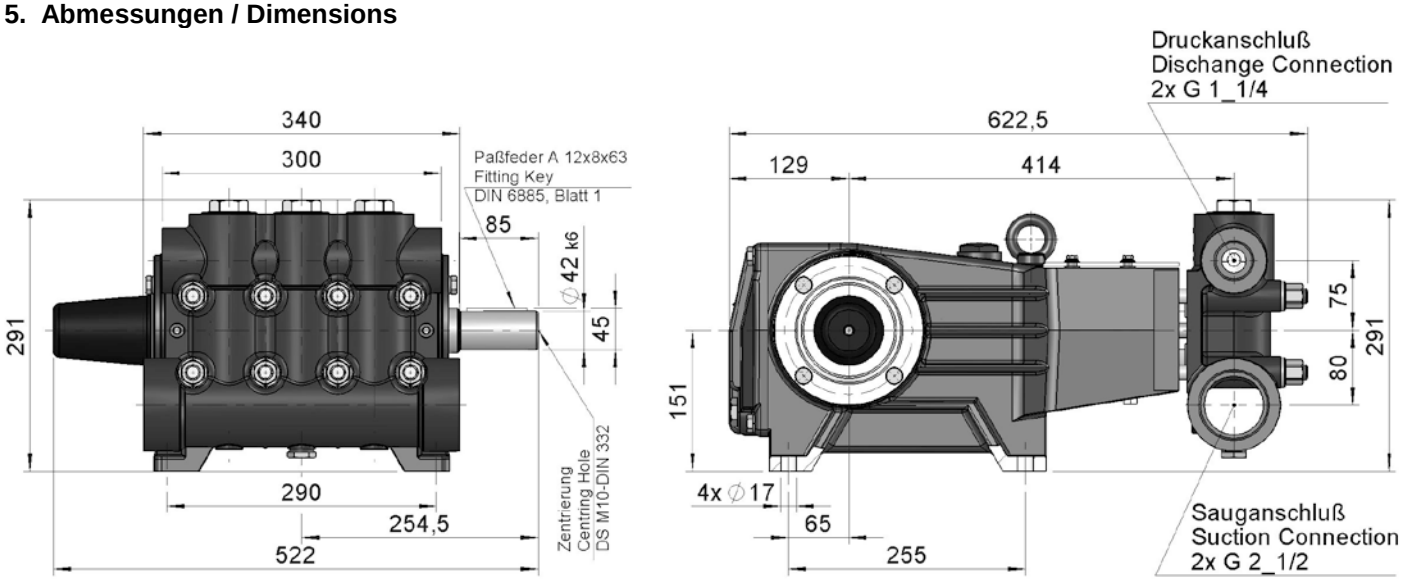

6. Installation / Inbetriebnahme

6.1 Wellenschutz
Beim Betrieb der Pumpe muss das freie Wellenende durch den Wellenschutz (21), die angetriebene Wellenseite und Kupplung durch einen bauseitigen Berührungsschutz sowie der Plungerraum durch die Abdeckplatte (30) abgedeckt sein.

6.2 Drehrichtung der Pumpe
Die Drehrichtung der Antriebseinheit gemäß dem Drehrichtungspfeil auf dem Antriebsgehäuse einstellen.

6.3 Saugleitung Filter
Empfohlene Maschenweite 150 µm.

7. Betrieb
Angaben siehe Montageanleitung
SPECK-TRIPLEX-PLUNGERPUMPEN

6. Installation/ Putting into Operation

6.1 Shaft protector
When the pump is in operation, the open shaft end must be covered up by shaft protector (21), the driven shaft side and coupling by a contact-protector and the plunger room by cover (30).

6.2 Direction of pump rotation
Set the direction of rotation of the drive unit according to the direction of rotation arrow on the crankcase.

6.3 Suction line filter
Recommended mesh size 150 µm.

7. Operation
For informations, see assembly instructions
SPECK-TRIPLEX-PLUNGER PUMPS